



PARTS LIST

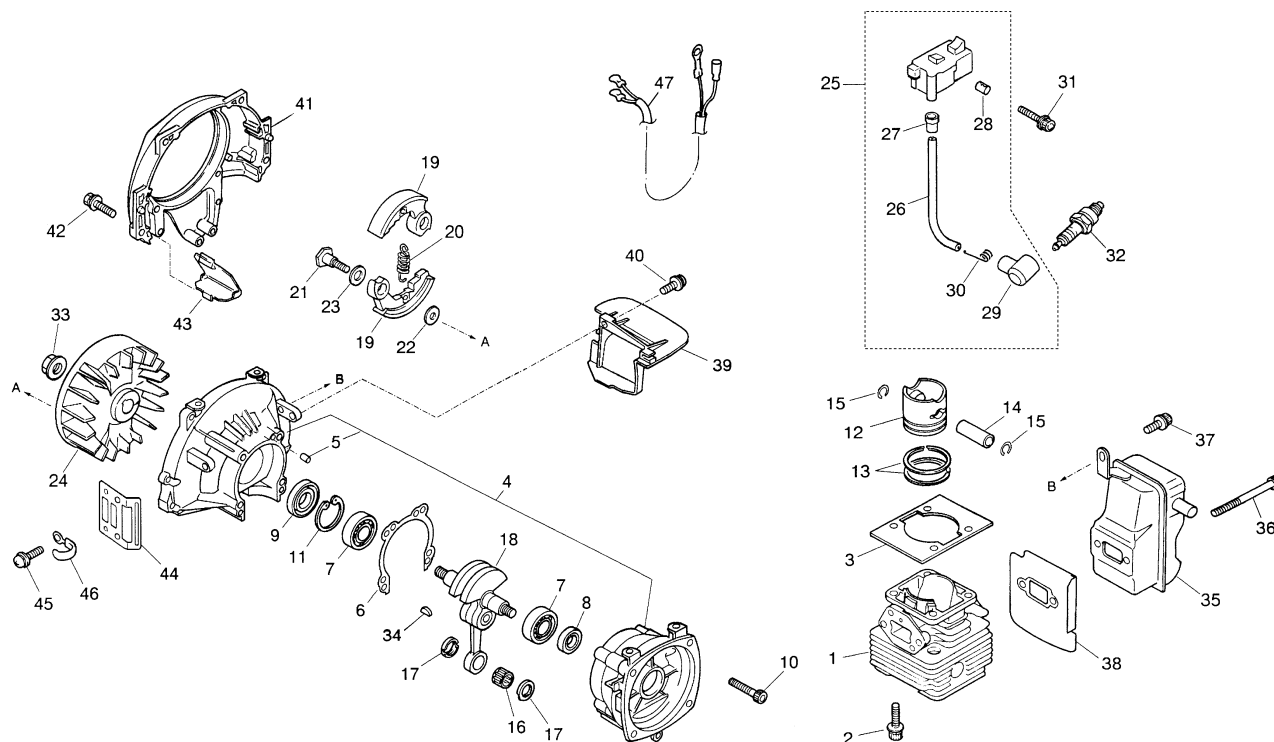
BRUSHCUTTERS

BC4350FW

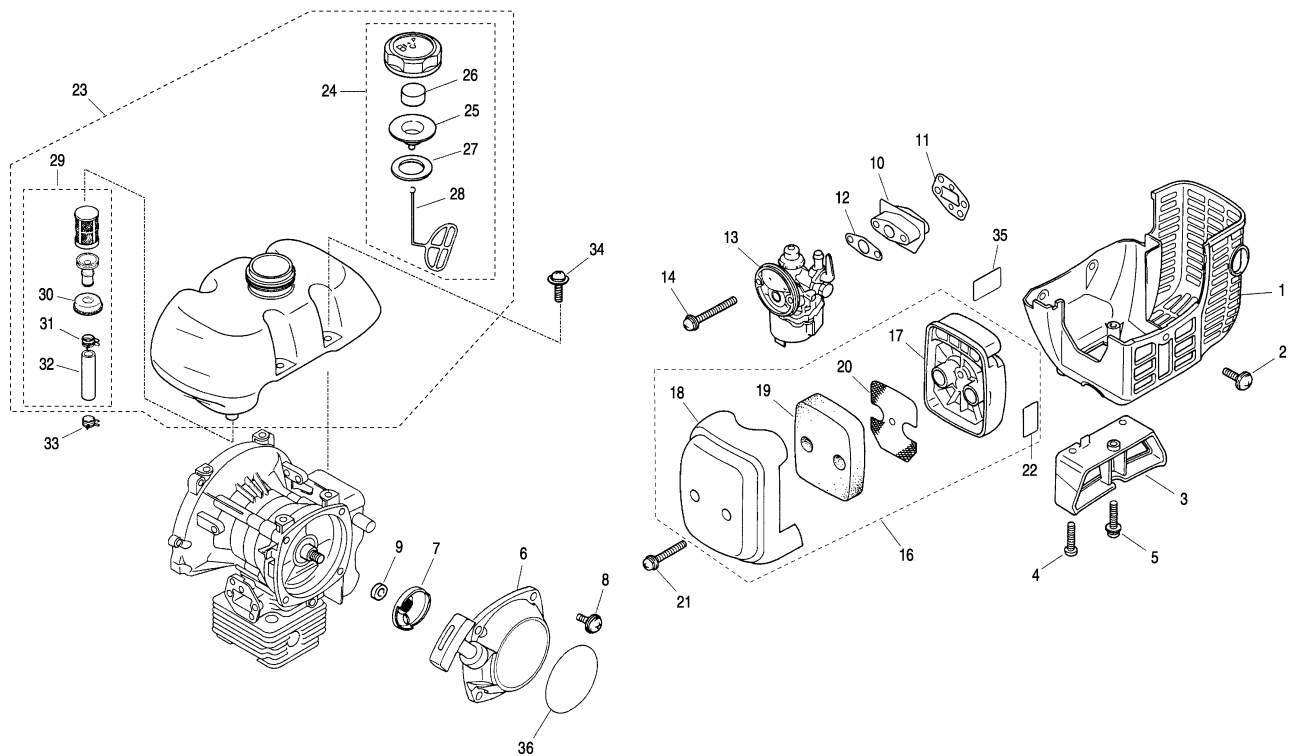
NOTE :

1. Use ZENOAH genuine parts specified in the parts list for repair and/or replacement.
2. ZENOAH does not warrant the machines, those which have been damaged by the use of any parts other than those specified by the company.
3. When placing orders of parts for repair and/or replacement, check if the model name and the serial number are suitable to those specified in the parts list, then use parts number described in the parts list.
4. The contents described in the parts list may change due to improvement.
5. The parts for the machine shall be supplied within ten (10) years after the machine is discontinued.
[It is possible that some specific parts may be subject to change of their delivery term and list price within the limit of ten (10) years after the machine is discontinued. And it is also possible that some parts may be available even after the limit of ten (10) years.]

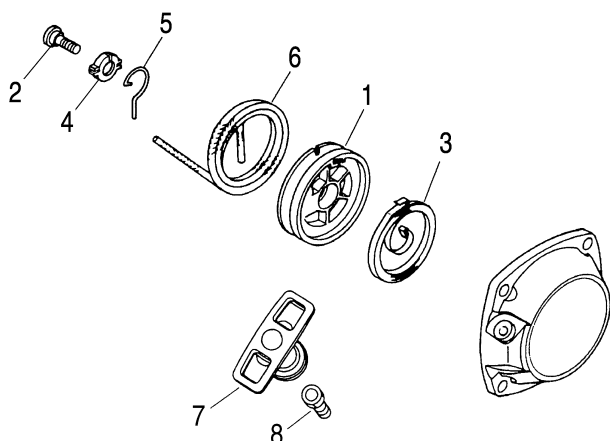
Fig.1 ENGINE UNIT



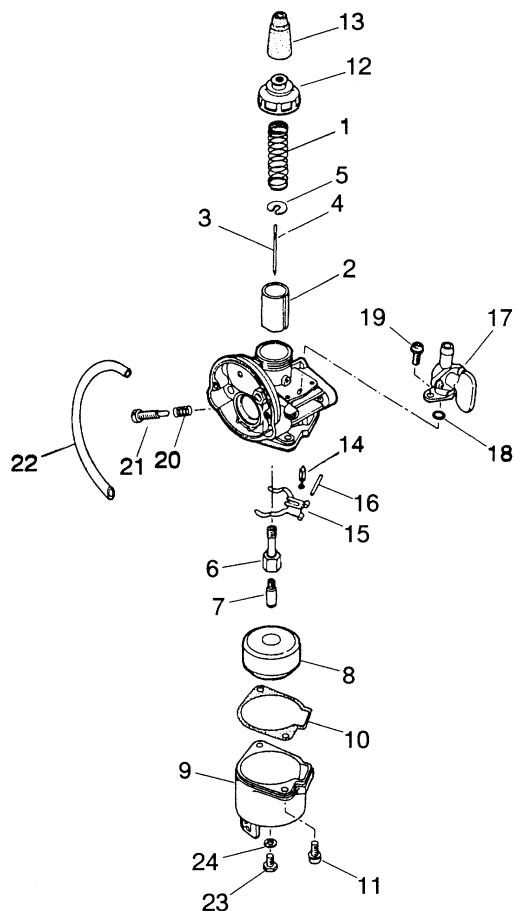
Key#	PART NUMBER	DESCRIPTION	Q'TY /UNIT	NOTE	Key#	PART NUMBER	DESCRIPTION	Q'TY /UNIT	NOTE
1	4500-12110	CYLINDER	1	M5xL22	27	2616-71320	• CAP	1	
2	1850-12130	BOLT	4		28	T1153-71250	• PIN	2	
3	4500-13120	GASKET, cylinder	1		29	5500-72110	• CAP, plug	1	
4	4500-21101	CRANKCASE COMP.	1		30	5500-72120	• SPRING	1	
5	2629-21130	• PIN	3	M5xL30	31	3350-14150	BOLT	2	M4xL20
6	4500-21140	GASKET CASE	1		32	3699-90419A	SPARK PLUG	1	RCJ6Y
7	06030-06201	BEARING	2		33	1650-43230	NUT	1	M8
8	4810-21210	OIL SEAL	1		34	1000-43240	KEY	1	
9	1650-21220	OIL SEAL	1		35	4570-15110	MUFFLER	1	
10	01252-30530	BOLT	4		36	01252-30565	BOLT	2	
11	04065-03212	SNAP RING	1		37	3310-31720	BOLT	1	M5xL14
12	4500-41110	PISTON	1		38	T1048-15210	GASKET	1	
13	8488C40300	RING	2		39	4570-15220	PLATE	1	
14	2850-41310	PIN	1		40	0263-90514	SCREW	1	
15	1300-41320	RING	2		41	T1117-31111	COVER, fan	1	
16	T2100-41410	BEARING	1		42	3310-12281	BOLT	4	M5xL20
17	2850-41510	WASHER	2		43	4500-31210	PLATE	1	
18	4500-42000	CRANKSHAFT COMP.	1		44	4500-22110	GUARD	1	
19	1400-51111	SHOE, clutch	2		45	0263-90514	SCREW	1	M5xL14
20	1651-51220	SPRING	1		46	8488K40010	CLAMP	1	
21	1200-51211	SCREW	2		47	T1085-71240	CORD COMP.	1	
22	1200-51230	WASHER	2						
23	1200-51241	WASHER	2						
24	T1153-71110	ROTOR	1						
25	T1117-71200	COIL ASSY	1						
26	4570-71220	• CORD	1						

Fig.2 ENGINE UNIT

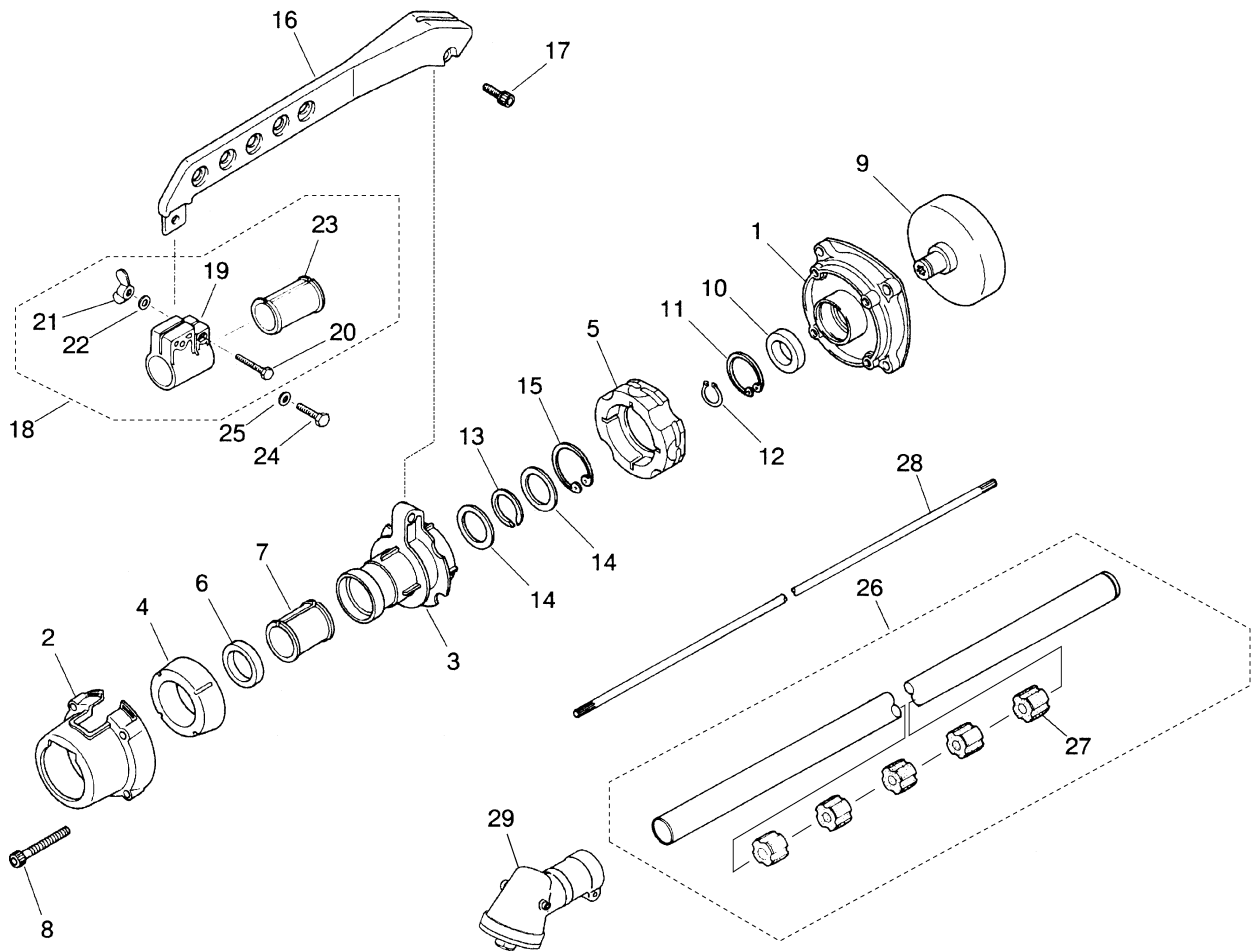
Key#	PART NUMBER	DESCRIPTION	Q'TY /UNIT	NOTE	Key#	PART NUMBER	DESCRIPTION	Q'TY /UNIT	NOTE
1	4570-32110	COVER	1		27	4500-85220	•• PACKING	1	
2	4500-32120	SCREW	3	M5xL12	28	3317-57242	•• STOPPER	1	
3	4570-31910	STAND COMP.	1		29	1400-85104	• JOINT ASSY	1	
4	3356-32210	SCREW	2		30	1400-85141	•• GROMMET	1	
5	0263-90520	SCREW	1	M5xL20	31	1000-08050	•• TUBE	1	L50
6	4500-75100	RECOIL ASSY	1		32	1410-86130	•• CLIP	1	
7	4500-75210	PULLEY	1		33	3073-86130	CLIP	1	
8	4500-75511	SCREW	4	M6xL14	34	1600-86120	SCREW	4	M5xL22
9	4700-75310	COLLAR	1		35	1970-31151	LABEL, cover	1	
10	4550-13160	INSULATOR	1		36	848G7G90C1	LABEL, recoil	1	
11	848G6014B1	GASKET, insulator	1						
12	4550-13130	GASKET, carburetor	1						
13	T1117-81000	CARB ASSY (G12P-1B)	1						
14	0263-90565	SCREW	2	M5xL65					
16	4570-82000	CLEANER ASSY	1						
17	1400-82113	• BODY	1						
18	4570-82120	• COVER	1						
19	1418-82130	• ELEMENT	1						
20	1400-82141	• SCREEN	1						
21	4550-82150	SCREW	2	M4xL25					
22	1133-82060	LABEL	1						
23	848G7G8501	TANK ASSY	1						
24	2133-85302	• CAP ASSY	1						
25	4570-85230	•• CAP INNER	1						
26	1030-85141	•• ELEMENT	1						

Fig.3 RECOIL STARTER

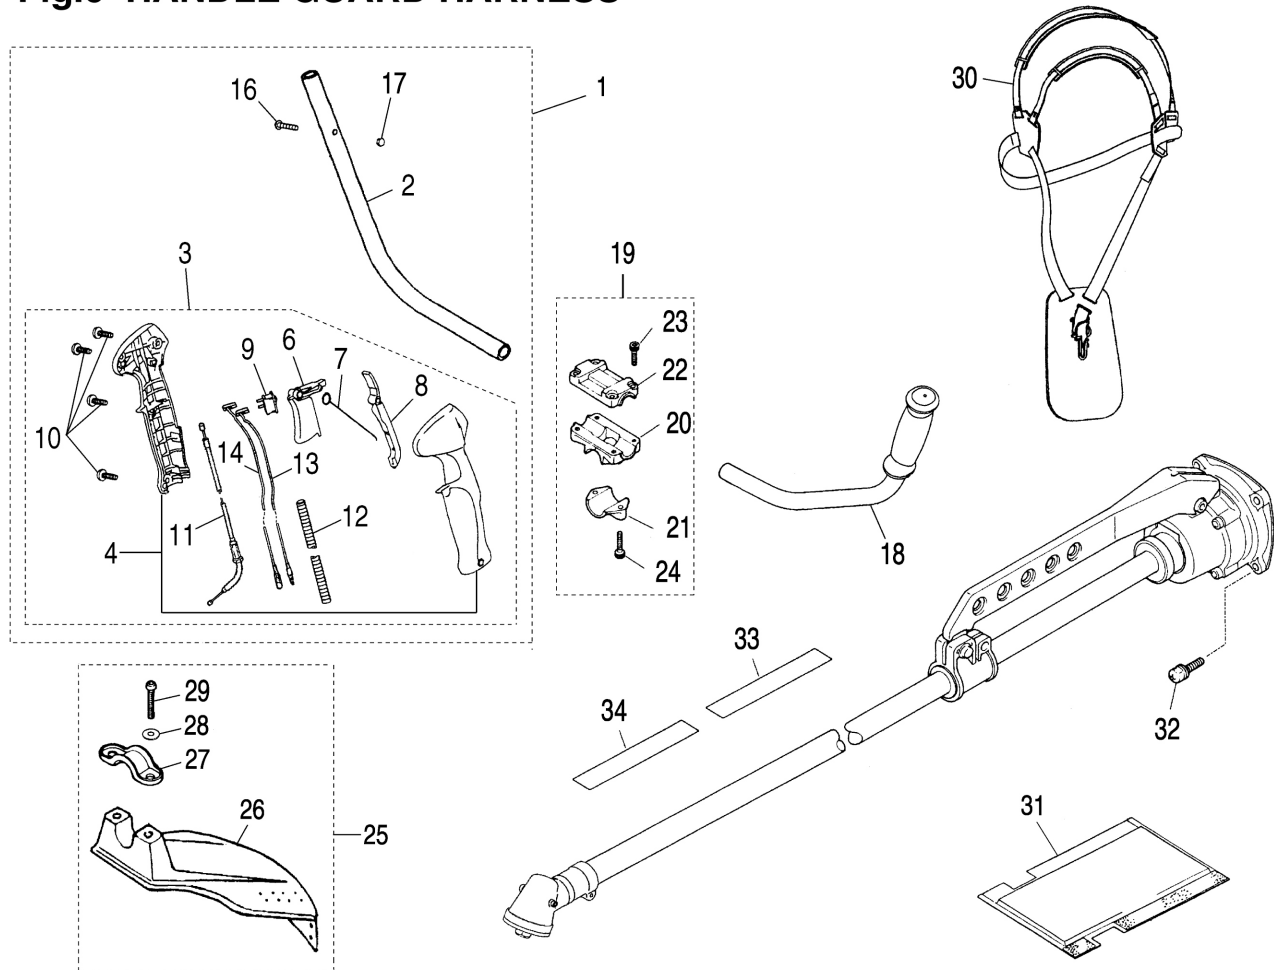
Key#	PART NUMBER	DESCRIPTION	Q'TY /UNIT	NOTE
	4500-75100	RECOIL ASSY	1	
1	4500-75120	• REEL	1	
2	4500-75150	• SCREW	1	
3	1850-75130	• SPRING, spiral	1	
4	4500-75180	• COLLAR	1	
5	4500-75190	• SWING ARM	1	
6	4500-75160	• ROPE	1	ø3.5xL880
7	1140-75320	• KNOB	1	
8	4700-75310	• COLLAR	1	

Fig.4 CARBURETOR

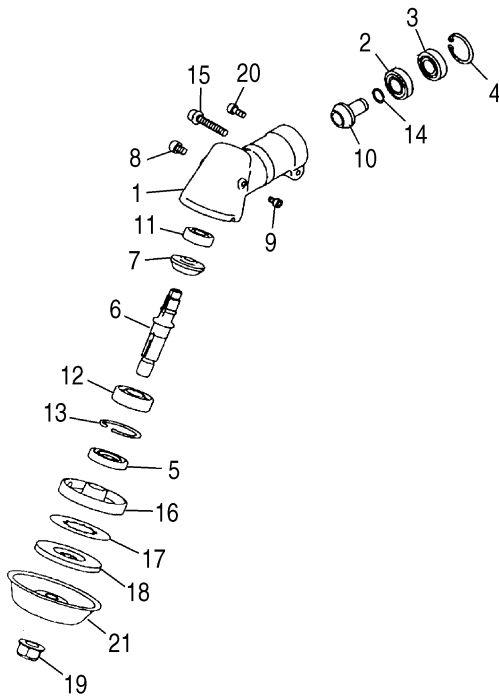
Key#	PART NUMBER	DESCRIPTION	Q'TY /UNIT	NOTE
	T1117-81000	CARB ASSY (G12P-1B)	1	
1	1335-81060	• SPRING, throttle	1	
2	4550-81150	• VALVE, throttle	1	
3	1614-81210	• NEEDLE, jet	1	
4	1030-81000-16	• CLIP	1	
5	1335-81070	• RECEIVE, spring	1	
6	1400-81230	• JET, needle	1	
7	4550-81240	• JET, main #67	1	
8	1335-81180	• FLOAT	1	
9	1400-81310	• CHAMBER, float	1	
10	1400-81320	• PACKING, float chamber	1	
11	0260-10412	• SCREW	2	M4xL12
12	1650-81121	• CAP, body	1	
13	1141-81120	• CAP	1	
14	1400-81361	• VALVE, needle	1	
15	1400-81340	• HINGE	1	
16	1400-81350	• PIN	1	
17	1403-81500	• COCK ASSY	1	
18	1400-81540	• O-RING	1	
19	0260-10410	• SCREW	2	M4xL10
20	1650-81260	• SPRING	1	
21	2751-81250	• SCREW, idle adjust	1	
22	4550-81710	• PIPE	1	
23	1400-81650	• SCREW, drain	1	
24	1400-81660	• PACKING		

Fig.5 DRIVE SHAFT

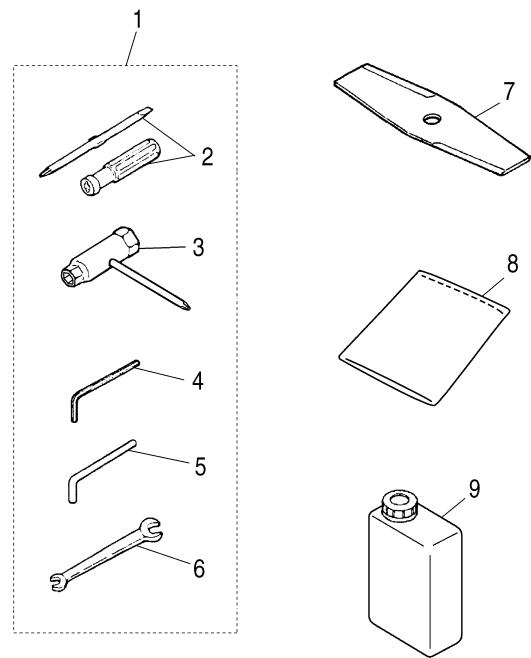
Key#	PART NUMBER	DESCRIPTION	Q'TY /UNIT	NOTE	Key#	PART NUMBER	DESCRIPTION	Q'TY /UNIT	NOTE
1	4050-11110	HOUSING	1		22	01642-20608	• WASHER	1	
2	4050-11150	CAP	1		23	3540-11450	• SPACER	1	
3	848JG453E0	JOINT	1		24	0224-00625	BOLT	1	M6xL25
4	4050-11250	ABSORBER F	1		25	01642-20608	WASHER	1	
5	4050-11260	ABSORBER R	1		26	848JG45820	PIPE COMP.	1	D28xd23x1500
6	3144-11150	DUST SEAL	1		27	3130-11324	• BUSH	5	
7	3540-11450	SPACER	1		28	6340-12211	SHAFT, D8x1540 Spline	1	
8	01252-30530	BOLT	4	M5xL30	29	848JJ76100	GEARCASE ASSY	1	
9	848B8151A1	DRUM	1						
10	06004-06202	BEARING	1						
11	04065-03515	RING	1						
12	04064-01510	RING	1						
13	3260-11410	RING	1						
14	848870W000	PLATE	2						
15	848BT23800	RING	1						
16	848B7338B1	HANGER	1						
17	1491-21511	BOLT	1	M6xL30					
18	3540-11441	BRACKET COMP.	1						
19	3540-11432	• BRACKET	1						
20	0224-00635	• BOLT	1	M6xL35					
21	3540-11460	• NUT	1						

Fig.6 HANDLE·GUARD·HARNESS

Key#	PART NUMBER	DESCRIPTION	QTY /UNIT	NOTE	Key#	PART NUMBER	DESCRIPTION	QTY /UNIT	NOTE
1	575 54 08-01	HANDLE(R) ASSY	1		22	848JL132K1	• CAP U	1	
2	575 54 09-01	• HANDLE(R)	1	ø22	23	01252-80522	• BOLT	4	M5xL25
3	8488R40500	• GRIP-S ASSY	1		24	01252-80525	• BOLT	2	
4	576 04 53-01	•• HANDLE HALF, SET	1		25	575 54 78-01	GUARD ASSY	1	
					26	6231-24114	• GUARD	1	
6	848JL033C3	•• LEVER	1		27	3540-24121	• CLAMP	1	
7	848JL033D2	•• SPRING	1		28	3540-24130	• BOLT	2	
8	848JL033E3	•• LEVER-S	1		29	0290-20615	• WASHER	2	
9	T4506-52110	•• SWITCH	1		30	544 84 58-02	HARNESS ASSY	1	
10	8488241600	•• SCREW	4		31	848B8138A1	PROTECTOR	1	
11	8488P20380	•• CABLE ASSY	1		32	6468-91150	BOLT	4	M6xL20
12	8488H19201	•• TUBE	1		33	575 54 00-01	PLATE, name	1	
13	8488M10020	•• CORD COMP.	1		34	8488X10020	LABEL, caution	1	
14	8488M10580	•• CORD COMP.	1						
16	T4960-53010	• SCREW	1						
17	3320-15310	• NUT	1						
18	575 54 74-01	HANDLE(L) COMP.	1	ø22					
19	575 53 96-01	BRACKET ASSY	1						
20	575 53 97-01	• BRACKET	1						
21	3543-14121	• CAP L	1						

Fig.7 GEARCASE

Key#	PART NUMBER	DESCRIPTION	Q'TY /UNIT	NOTE
	848JJ76100	GEARCASE ASSY	1	
1	848JL061A2	• GEARCASE	1	
2	06000-06001	• BEARING	1	
3	06001-06001	• BEARING	1	
4	04065-02812	• RING	1	
5	8488AL3500	• SEAL	1	
6	848JJ761B0	• SHAFT	1	
7	848JL061C3	• GEAR	1	
8	T4950-60800	• BOLT TORX	1	M6xL8 T27
9	T4950-40800	• BOLT TORX	1	M4xL8 T27
10	848JJ761D1	• PINION	1	
11	06000-06000	• BEARING	1	
12	06004-06202	• BEARING	1	
13	04065-03515	• RING, SNAP	1	
14	04064-01210	• RING	1	
15	T4950-63540	• BOLT TORX	1	
16	848JL061F4	• HOLDER (A)	1	
17	848JG061L0	• PLATE	1	
18	848JL061G2	• HOLDER (B)	1	
19	T3002-13260	• NUT	1	M10xP1.25
20	T1501-32120	• BOLT TORX	1	M5xL12 T27
21	848JG061J1	• COVER	1	

Fig.8 ACCESSORIES

Key#	PART NUMBER	DESCRIPTION	Q'TY /UNIT	NOTE
1	575 55 30-01	TOOL SET	1	
2	1030-91340	• DRIVER	1	
3	8488U10050	• SOCKET	1	
4	09007-00425	• WRENCH	1	for M5
5	3540-91110	• BAR	1	
6	3540-91120	• SPANNER	1	
7	6189-15111	BLADE	1	
8	3541-91110	BAG	1	
9	1000-91301	TANK ASSY	1	