


零件表PARTS LIST WH-2012E1

圖號 NO.	編號 CODE	名 稱	DESCRIPTION	Q'TY	圖號 NO.	編號 CODE	名 稱	DESCRIPTION	Q'TY
01	B080558000	台架	Frame	1	06-3	BS16108019500	內六角螺絲	Screw	4
01-1	B100507000	圓塞頭	Plug	4	06-4	BS33108400	安全華司	Safety Washer	4
02	B080658010	輪軸	Wheel Shaft	1	07	B120553020	連軸器(幫浦)	Flexible Coupling (Pump)	1
02-1	BS11112064100	六角螺絲	Set Bolt	2	07-1	B120453030	連軸器(引擎)	Flexible Coupling (Engine)	1
02-2	BS22112200	防鬆螺帽	Nut	2	07-2	B120353000	聯軸器內襯	Bushing	6
02-3	BS32112200	彈簧華司	Spring Washer	2	07-3	BS17112013500	無頭內六角螺絲	Screw	2
02-4	BS31112200	平面華司	Washer	2	08	B120258000	法蘭盤墊片	Flange Base Plate	1
03	B081058020	固定輪 9"	Wheel 9"	2	08-1	BS16208025500	內六角螺絲	Screw	4
03-1	BS7004300	開口銷	Pin	4	08-2	BS33110400	安全華司	Safety Washer	4
03-2	B081350000	車輪護蓋	Wheel Cover	2	09	B100358001	引擎襯套	Bushing	1
03-3	B100150000	平面華司	Washer	4	10	BA10055200	引擎	Engine	1
04	B080958000	腳架	Stand	1	10-1	BS11110038300	六角螺絲	Set Bolt	4
04-1	BS11112032122	六角螺絲附華司	Set Bolt,Washer	2	10-2	BS31110200	平面華司	Washer	4
04-2	BS31112200	平面華司	Washer	3	10-3	BS31110300	平面華司	Washer	4
04-3	BS22112200	防鬆螺帽	Nut	3	10-4	BS34110200	外齒華司	Gasket	4
04-4	BS31112201	平面華司	Washer	2	10-5	BS22110200	防鬆螺帽	Nut	4
04-5	B100558010	腳墊	Cushion	1	11	A020204021	高壓泵浦	High Pressure Pump	1
05	B080758010	把手	Handle	1	12	B031258000	壓力錶接頭	Pressure Gauge Coupling	1
05-1	BS11112044100	六角螺絲	Set Bolt	4	13	B031110000	壓力錶	Pressure Gauge	1
05-2	BS31112200	平面華司	Washer	4	14	B031358000	排氣接頭	Connector	1
05-3	BS22112200	防鬆螺帽	Nut	4	15	B031601000	球形閥	Ball Cock	1
05-4	BS32112200	彈簧華司	Spring Washer	4	16	B010307000	腳座	Stand	1
05-5	B100558000	管塞頭	Plug	2	16-1	BS11112016122	六角螺絲附華司	Set Bolt, Washer	2
06	B120158000	法蘭盤	Flange	1	17	B250002211	省油器+加油線組	Petro-Saver W/ Cable Assy.	1
06-1	BS16208025500	內六角螺絲	Screw	4	18	B181350000	高壓機台黏標	Sticker	1
06-2	BS33110400	安全華司	Safety Washer	4	19	B180501410	規格黏標	Metal Plate	1

零件表PARTS LIST WH-2012E1

[illegible]

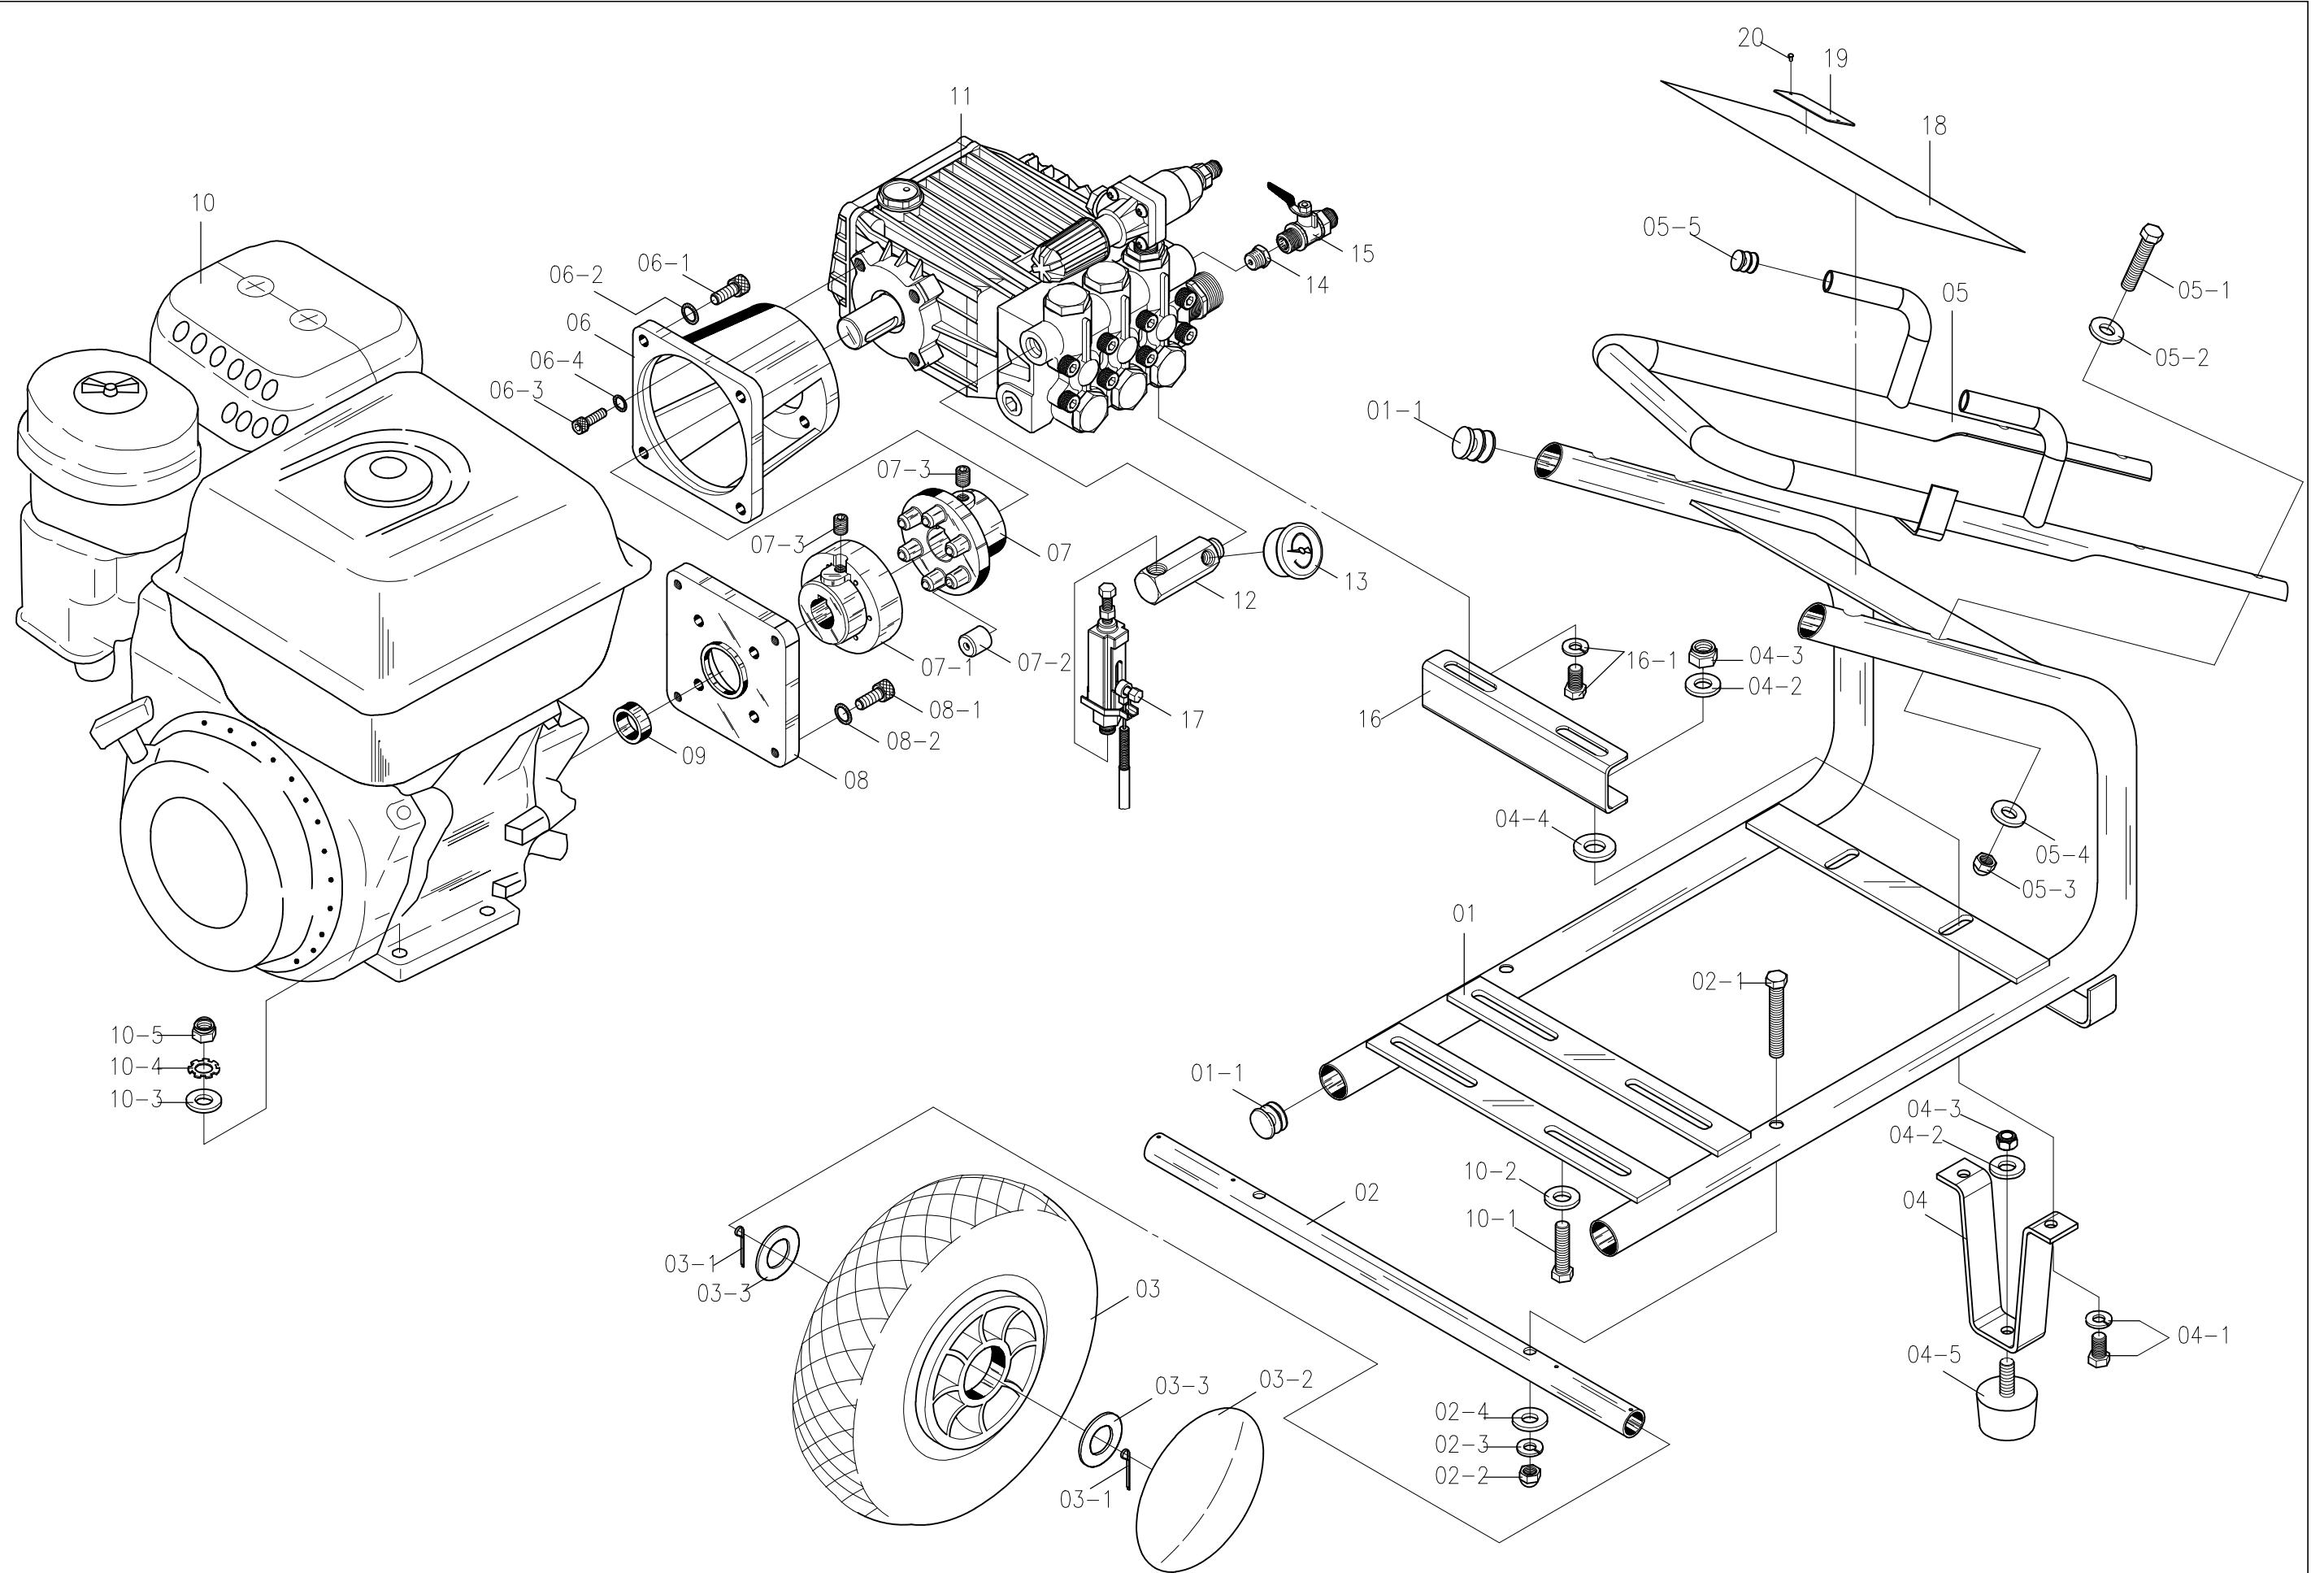

WH-2012E1