

零件表PARTS LIST WH-4016D

圖號 NO.	編號CODE	名稱	DESCRIPTION	Q'TY	圖號 NO.	編號CODE	名稱	DESCRIPTION	Q'TY
1	B010112000	曲軸箱	Crankcase	1	09	B010909020	曲軸油封	Crankshaft Oil Seal	2
01-1	B180617020	型式規格黏標	Model Label	1	10	B011012120	曲軸油封蓋 A	Crankshaft Oil Seal Cover	1
01-2	B180101000	流水號數黏標	Mfg. No. Plate	1		B011112120	軸承油封蓋 B	Crankshaft Oil Seal Cover	1
01-3	B180105060	更換機油黏標	Oil Change Care Plate	1	10-1	BG1068007363	O形環	O-Ring	2
01-4	B180105050	柱塞潤滑油黏標	Lubricating Care Plate	1	10-2	B012612000	軸承蓋平墊圈	Shim	2
01-5	B012512000	柱塞軸套	Piston Sleeve	3	10-3	BS16110025500	內六角螺絲	Screw	8
02	B010212000	柱塞油封	Piston Oil Seal	3	10-4	BS32110200	彈簧華司	Spring Washer	8
03	B010312000	腳座	Crankcase Stand	2	12	B011612000	曲軸箱後蓋	Rear Cover	1
03-1	BS11112016122	六角螺絲附華司	Set Bolt, Washer	4	12A	B012201003	油鏡組	Oil Window Assy	1
04	B013017001	柱塞組	Piston Assy.	3	12-1	B012201020	油鏡	Oil Window	1
04-1	B013117000	柱塞桿	Piston Rod	3	12-2	BG1023402870	O形環	O-Ring	1
04-2	B013217000	柱塞套	Piston Sleeve	3	12-3	B011712000	後蓋迫緊	Rear Cover Packing	1
04-3	B013317000	柱塞套固定螺絲	Piston Screw	3	12-4	BS16108019500	內六角螺絲	Screw	6
04-4	BG3007001000	背托環	Back-Up Ring	3	12-5	BS32108200	彈簧華司	Spring Washer	6
04-5	BG1007001103	O形環	O-Ring	3	13A	N/A	排油螺絲組	Drainage Screw Assy	1
04-6	B013517000	柱塞套平墊圈	Gasket	2	13	B011808000	排油螺絲	Drainage Screw	1
05	B010512000	柱塞銷	Piston Pin	3	13-1	BG1010601770	O形環	O-Ring	1
05-1	BS4101300	C扣環	C-Clip Ring	6	14	B011901111	加油蓋	Oil-Inlet Cover	1
06A	N/A	連桿組	Connecting Rod Assy.	3	15	B012405000	滴油孔蓋	Drip Cover	3
06	B010612001	連桿	Connecting Rod	3	21	B020117021	汽缸(引擎)	Cylinder (Engine)	1
06-1	BS11208040500	六角螺絲	Set Bolt	6		B020117031	汽缸(馬達)	Cylinder (Motor)	1
06-3	B014312000	螺絲防鬆片	Lock Washer	3	21-1	BS16112089300	內六角螺絲	Screw	8
06-4	BS31208503	平面華司	Washer	6	21-2	BS33112400	安全華司	Safely Washer	8
07	B010712000	軸承	Bearing	2	22N	B020311050	U迫緊	U-Packing	3
08	B010812530	曲軸	Crankshaft	1	23N	B020311030	墊圈	V-Packing	3
08-1	B012109000	曲軸鍵	Crankshaft Key	1	24N	B021011000	防水油封	Waterproof Oil Seal	3

零件表PARTS LIST WH-4016D

[illegible]

